


# Quick Start Guide

Congratulations and thank you for purchasing the tablet computer. This guide provides step-by-step instructions for a quick setup of your tablet computer.


## 1 Unpack

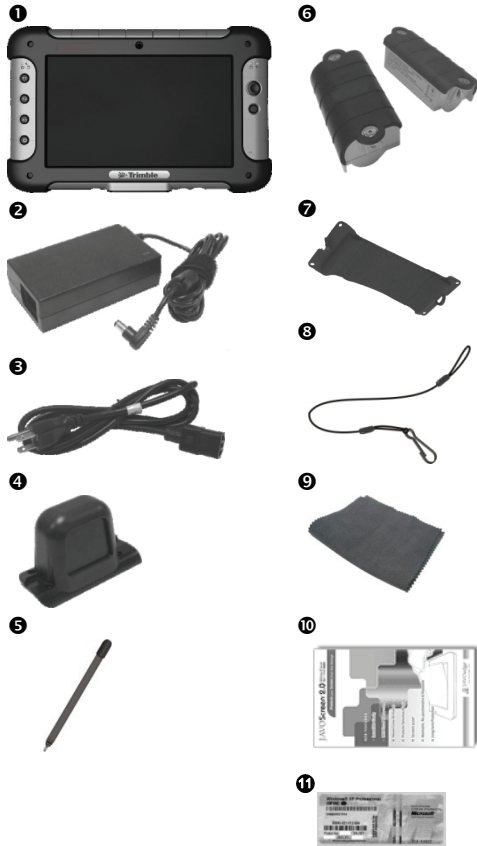

1. Tablet computer
2. AC adapter
3. Power cord
4. Extended cap
5. Stylus
6. Battery pack (2)
7. Hand strap
8. Tether and snap
9. Cleaning cloth
10. Screen protectors (2)
11. Windows Vista Certificate of Authenticity Label (COA)

## 2 Install battery packs

- ▶ Place the tablet computer upside down.
- ▶ Fit the two battery packs into place on both sides.

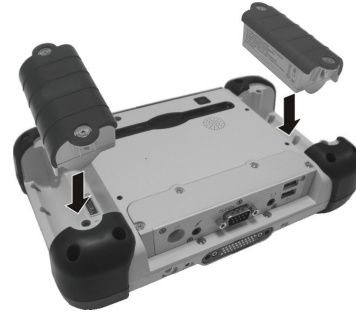


- ▶ Remove the rubber cap from the included stylus to expose a Philips screwdriver, or use a small #1 Philips head screwdriver to secure the two screws on each battery.



## 3 Attach accessories


- ▶ Attach the hand strap and secure with four screws.
- ▶ Attach the tether and snap to either side of the hand strap.

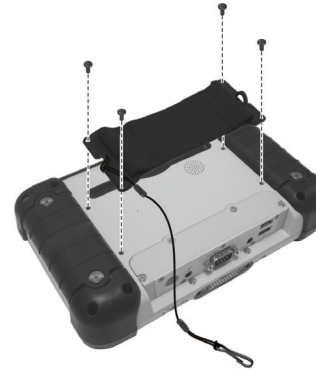

- ▶ Install the screen protector film following the instructions provided in the screen protector package.

## 4 Connect AC power

- ▶ Plug the DC cord of the AC adapter into the power connector (1) of the tablet computer.
- ▶ Plug the female end of the AC power cord into the AC adapter and the male end into an electrical outlet (2).

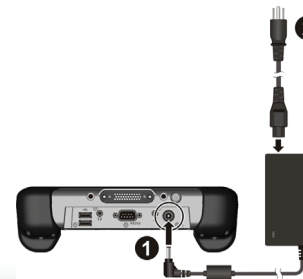

## 5 Charge and power up

When the AC adapter is connected, the battery pack is charging.

The battery status indicator ( ) lights:

- Solid green:** battery is fully charged.
- Solid amber:** battery is charging.
- Blinking red:** battery capacity is below 10 %.

- ▶ Press the power button ( ). Notice the screen appears blank for 8-10 seconds but the power indicator ( ) lights up.

The power indicator ( ) lights:





- Solid green:** tablet computer is turned on.
- Blinking green:** tablet computer is in sleep mode.

### NOTE:


- Use AC power when starting the tablet computer for the first time.
- Wait at least 5 seconds after turning off the tablet computer before turning it back on.



5 6 1 5 8 1 9 8 0 0 3 R 0 1

Ref	Component	Description
1	Webcam Lens	Allows you to use your computer's camera function.
2	Indicators	Shows the status of devices.
	Power 	<b>Solid green:</b> tablet computer is turned on. <b>Blinking green:</b> in sleep mode.
	Battery Charge 	<b>Solid green:</b> battery is fully charged. <b>Solid amber:</b> battery is charging. <b>Blinking red:</b> battery capacity is < 10 %.
	Hard Disk Drive / Heater 	<b>Blinking green:</b> hard disk drive is in use. <b>Red:</b> heater is on (occurs when temperature is 0 °C and below when booting your tablet computer).
	Wireless LAN & Bluetooth 	<b>Solid green:</b> wireless antenna is activated.
3	F1 Button	<b>Short press:</b> Microsoft Internet Explorer. <b>Long press:</b> (> 2 seconds) rotates display orientation from landscape to portrait.
4	F2 Button	<b>Short press:</b> launches the G-Camera.



Ref	Component	Description
5	F3 Button	<b>Short press:</b> launches the input panel. <b>Long press:</b> (> 2 seconds) locks the keypad and disables the touchscreen.
6	Power Button 	Turns power ON and OFF. For detailed information on power management, see Windows' Help.
7	Directional Button	UP / DOWN / LEFT / RIGHT arrow keys. F2 + UP arrow key increases sound volume. F2 + DOWN arrow key decreases sound volume. F2 + LEFT arrow key decreases LCD brightness. F2 + RIGHT arrow key increases LCD brightness.
8	Enter Button	Serves as the <b>Enter</b> key. F1+Enter key resets the computer (same as what Ctrl+Alt+Del on a keyboard does.) F2+Enter key puts the tablet computer in ECO (power saving) mode. <b>NOTE:</b> The power saving mode works only when using battery power.
9	LCD Touchscreen	Displays and receives info for the tablet computer.
10	Microphone	Receives sound and voice for the computer.

